

APPLICATION GUIDE

ConProtect Creme IN.

Water repellent impregnation for dense and porous mineral substrates.



Before applying ConProtect Creme IN.

Before considering the use of ConProtect Creme IN, carefully read its Safety Data Sheet (SDS) to obtain safety and toxicology information, as well as guidelines for proper transport, storage, and usage. The Safety Data Sheet is available on our website at www.slprotection.eu or upon request from your local representative.





Wear personal protective equipment

Recommended for use with a cartridge gun


Applying ConProtect Creme IN.

Angle and position of the drill holes

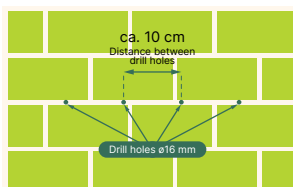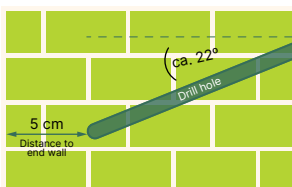

Holes must be drilled into the masonry. The recommended spacing between drill holes depends on the absorbency of the substrate, but the standard recommendation is 10 cm. The drilling depth depends on the wall thickness, ensuring at least a 5 cm remaining thickness. Before injecting ConProtect Creme IN, the holes must be cleaned of dust.

Inject with cartridge gun

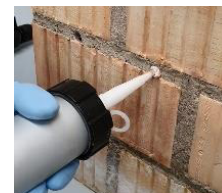

ConProtect Creme IN is typically applied by pressureless injection using a cartridge gun or similar device.

Seal drill holes



Allow to dry for 24 h before following activities



After applying ConProtect Creme IN.



Application equipment can be cleaned with any organic solvent.



SL Protection OÜ
www.slprotection.eu
Vana-Narva mnt 30, Maardu 74114, Harjumaa, Eesti